

# dip-san<sup>®</sup>

## The hygienic toilet brush system



**mcallan**  
fresh ideas for a cleaner world™

# One dip...

The floor standing model easily converts into a wall mounted version - see the optional [wall mounting bracket](#) opposite.



The [all new](#) portable model for the service trolley, 'away from home', market - hospitals, hotels, nursing homes, etc.



## To clean this toilet brush after use...

...simply place the brush into its holder, and push the handle to dip the brush head into the reservoir of [dip-san sanitising fluid](#).

Agitating the brush head against ribs in the reservoir by twisting the handle assists the cleaning process.

Its spring loaded action returns the handle to its original position out of the fluid so that the brush head is clean and ready for the next use.



# ...does it!

## dip-san optional wall mounting bracket

Easily converts the floor standing model into a wall mounted version.



## dip-san optional sanitising ring

Infection control ensured with this disinfectant filled o-ring that sanitises the handle every time it is pressed. Tub of 25 replacement inserts available.



## dip-san replacement brush heads

Extends the effective life of the dip-san and are easily fitted.



## dip-san sanitising fluid powered by

**VIRUSOLVE<sup>+</sup>**  
INFECTION CONTROLLED

Completely safe detergent available as a 2 litre concentrate and 5 litre RTU.



## dip-san 20ml dosing pump


A single pump action provides the right dose of dip-san fluid concentrate to the dip-san reservoir.



## dip-san 750ml trigger spray bottle

Supplied empty - simply add 2 doses (2 x 20ml) of dip-san fluid concentrate to make a ready-to-use solution.



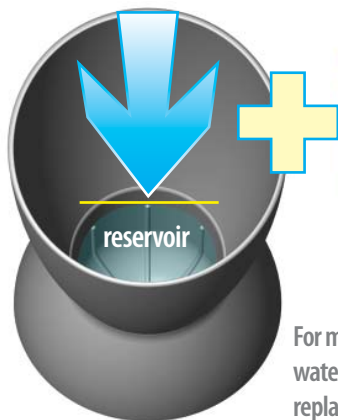

## Filling the dip-san reservoir

- 1 Remove brush
- 2 Flush away any used solution (this is non-hazardous to drains and septic tanks)
- 3 Fill reservoir with fresh water to top of vertical ribs
- 4 Add 20 ml **dip-san sanitising fluid**
- 5 Replace brush
- 6 Now ready for use

For maximum effectiveness refresh the portable dip-san daily with fresh water and **dip-san sanitising fluid**, the floor standing model weekly and replace the handle sanitising rings monthly.



## dip-san® sanitising fluid

powered by **VIRUSOLVE®+**

- Virusolve+ is an innovative blend of dodecylamine structures, solvents and **completely safe detergent**
- Virusolve+ cleans and disinfects **without leaving harmful residues**
- Virusolve+ is **odourless, colourless and safe on all surfaces** - fabric, rubber, plastic, vinyl, melamine, hard and soft materials
- Virusolve+ is **bleach-free and lanolin-free**
- Virusolve+ attacks and destroys bacteria, fungi, viruses and spores, safely - with **no risk for the people using it or the environment**
- Virusolve+ penetrates the membranes of bacteria and viruses destroying RNA and rendering cells **incapable of replication or mutation**
- Virusolve+ **continues fighting** micro-organisms long after application
- Virusolve+ is totally **non-hazardous** at operational dilutions and **will not cause skin irritation**
- Virusolve+ is **not tested on animals**

**dip-san sanitising fluid** is supplied in a concentrated form and is diluted with fresh water in the dip-san reservoir by adding 20 ml dip-san sanitising fluid

**For optimum effectiveness change this mixture regularly.**

### WARNINGS AND PRECAUTIONS

- Harmful if swallowed
- Irritating to eyes and skin
- In case of contact with eyes, rinse immediately with plenty of water and seek medical advice
- Keep out of direct sunlight and store between 5°C & 40°C.
- Keep out of sight and reach of children



CE 0120

International Patents Pending

**dip-san**® is a registered trademark of mcallan innovations ltd

**VIRUSOLVE**®+ is a registered trademark of Amity Ltd



**mcallan**

fresh ideas for a cleaner world™

for further information go to: [www.dip-san.com](http://www.dip-san.com)

# dip-san<sup>®</sup>

## Questions & Answers

What is different about **dip-san**?

*The **dip-san** toilet brush is designed to sanitise the toilet brush head and handle after every use.*

What is the main benefit of **dip-san**?

*Stops the incubation of germs within brush holder and reduces the risk of germ transfer between users via the handle.*

How is the brush head and handle sanitised?

*The brush head is plunged into an internal reservoir of sanitising fluid after each use.  
The grip part of the handle simultaneously passes through a sanitising attachment which is fitted to the lid.*

How can **dip-san** be used at hospitals with a 'no brush' policy?

*A fully portable version of **dip-san** has been developed for attachment to cleaning carts.*

How effective is **dip-san** Sanitising Fluid against 'Superbugs'?

***dip-san** Sanitising Fluid is a high level disinfectant, 99.999% effective (log 4 reduction) against common Health Care Acquired Infections such as MRSA and C.Diff.*

Can bleach liquid or chlorine tablets be used in the reservoir?

*We strongly advise against the use of chlorinated products for Health and Safety considerations, these products will also corrode the internal mechanism.*

How often should the **dip-san** be changed and how fluid much is required?

*Portable **dip-san** requires changing on a daily basis, 20ml of concentrate is all that is required via dosing pump.  
For maximum effectiveness the floor and wall mounted units are required to be changed weekly, sooner if the reservoir looks soiled.*

How are under/over dosing issues avoided?

*5 Litre ready-to-use **dip-san** Sanitising Fluid is available at the required 5% solution.*

How often should the handle sanitising ring insert be changed?

*On average between 2-4 weeks depending on usage and ambient temperature.*

Is **dip-san** Sanitising Fluid completely safe to use and dispose of?

*Yes, there are no associated risk phrases in 5% concentration, simply flush after use.*

How can the implementation of the **dip-san** system be cost effective?

*With each Health Care Acquired Infection costing the NHS in excess of £5,000 to treat there is considerable scope for cost savings.*

What are the environmental credentials of **dip-san**?

*Adoption of the **dip-san** toilet brush system will avoid the regular replacement of soiled toilet brushes, relieving the pressure on landfill and incineration facilities. The use of the **dip-san** Sanitising Fluid will replace bleach/chlorine products which are hazardous to both the human and natural environment.*